

Product Installation, Operation & Maintenance Manual



Product Installation, Operation and Maintenance Manual



Introduction

Coerco engineer a range of Polyethylene Grease Arrestors to suit any above or below ground application that have all been rigorously tested to meet Water Corporation Guidelines and Australian Standard and approved by Department of Health for installation throughout W.A., S.A. and N.T.

Their durable lightweight design makes them convenient to transport which is ideal for local and remote destinations alike. Coerco Grease Arrestors are designed to provide many years of trouble- free service by following these installation guidelines. Sizing is a critical aspect to ensure efficiency, therefore, tanks should be sized by either calculating the fixture unit ratings or peak flow rates. Refer to your local Water Authority for further details.

WESTERN AUSTRALIA



Water Corporation - Trade Waste (Ph: 13 13 95)

Email: tradewaste@watercorporation.com.au

SOUTH AUSTRALIA



SA Water - Trade Waste (Ph: 1300 729 283)

Email: tradewaste@sawater.com.au

NORTHERN TERRITORY



Power and Water Corporation - Trade Waste (Ph: 1800 245 092)

Email: tradewastedept.pwc@powerwater.com.au

Product Installation, Operation and Maintenance Manual



Installation Instructions

These instructions must be read in conjunction with local council, government authorities and relevant standards applicable to this installation and should be performed by suitably qualified personnel.

Grease Arrestors discharging to the Ministers Sewer must have a Trade Waste Application submitted and approved by the local Water Authority prior to installation.



- Tank should only be moved when empty by using the lifting points located at the top of the tank.
- Conformance plate is located at the base of the internal manhole riser and can be found by removing the inlet cover.
- Data Plate is moulded into the tank directly above the inlet pipe.
- Care should be taken when placing or moving tanks on hard/abrasive surfaces.
- Visual Inspection for any damage during transport should be conducted prior to installation.
- Identification plate and serial no. is located on top of the tank, adjacent to the inlet side and should be recorded at the tail of this manual for future reference.



- Ensure excavated hole is free of all services Dial Before You Dig 'www.1100.com.au'.
- Observe all local and statutory requirements related to excavations (eg. Benching/battering/ shoring/dewatering/barriers and warning signs).
- The installer shall take all reasonable precautions to ensure the tank is not within the zone of influence of nearby existing structures, such as retaining walls, residential dwellings, commercial buildings, trafficable areas, and the like. In such circumstances, advise from a suitably qualified person should be obtained.
- Measure the distance from the base of the tank while sitting on flat ground to the inlet pipe invert level (effective depth).
- Excavate a suitably sized hole and allow for a 100m clean and level compacted base of sand, cracker dust, or crushed limestone up to 6mm, beneath the base of the tank.
- **Note:** Maximum cover allowed over the tank is equal to the top of the riser on each model as shown in diagram. Non-compliance will void warranty.

Product Installation, Operation and Maintenance Manual



Installation Instructions (continued)



Above Ground Installation

- Grease Arrestors must be installed on a level concrete slab no less than 100mm thick.
- Install 20mm galvanized steel pins through the support leg holes and fix to the concrete base with suitable fixings eg. Dynabolt, Ankascrew.
- Ensure there is vertical clearance above the grease arrester, greater than the maximum depth of the grease arrestor, but not less than 1m.
- Manhole riser should be cut to a suitable height for the application.
- Remove factory fitted screw lid and seal the underside of the Manhole Adaptor, to the riser with Sikaflex Stick & Seal, Selleys N Mastic, or similar product.
- Fix Manhole Adaptor from the inside with minimum of 4 x Stainless Steel Screws. Refit screw lid and ensure a gas tight seal.
- Provision should be made for a platform and access steps, manufactured to Australian Standard AS-1657 for safe access to inspect and maintain.
- Provide adequate protection to prevent unauthorized access or damage to Grease arrestor (eg. Enclosure, cage, or bollards etc.).
- The grease arrestor is manufactured from UV stabilized polyethylene with a UV resistance value of UV20 as per AS4766. However, consideration shall be given to install the apparatus out of direct sunlight to maximise efficiency.
- Grease Arrestors located in internal areas shall meet ventilation requirements as specified in AS 5215 (Int):2024.
- Above ground Grease Arrestors shall have provision to contain the entire operating volume in the case of a spill.

Product Installation, Operation and Maintenance Manual




Installation Instructions (continued)

Below Ground Installation


- For non-trafficable areas, poly screw-lids can be installed as detailed in the Above Ground methodology above, must comply with AS3996:2019 and must be contained within a secure compound to prevent unauthorized access.
- Grease Arrestor manhole risers fitted to the tank can be cut to suit the application and should be at a height to ensure adequate stormwater drainage away from the unit.
- Seal the underside of the Manhole Adaptor, to the tank riser with Sikaflex Stick & Seal, Selleys N Mastic, or similar product.
- Fix Manhole Adaptor to the tank riser from the inside with minimum of 4 x Stainless Steel Screws and ensure a gas tight seal.
- Prepare a Butyl Mastic sealing bead on top of the Manhole Adaptor and fit the trafficable cover directly to the manhole adaptor and ensure a gas tight seal.
- Gatic style cast iron or composite lids must be installed into a self-supporting 150mm concrete slab with no direct weight transfer applied to the Grease Arrestor. Consult the manufacturer or design engineer for further details. For trafficable areas tanks should be fitted with Gatic style cast iron or composite access lids that comply with AS3996-2006 Table 3.1 (refer below). Furthermore, Gatic style cast iron or composite access lids must be keyed into a self-supporting concrete slab, that complies with AS 5215 (Int):2024 Section 7.2. Under no circumstances should any additional force be applied to the Grease Arrestor. Please consult the manufacturer or design engineer for further details.

Trafficable Areas

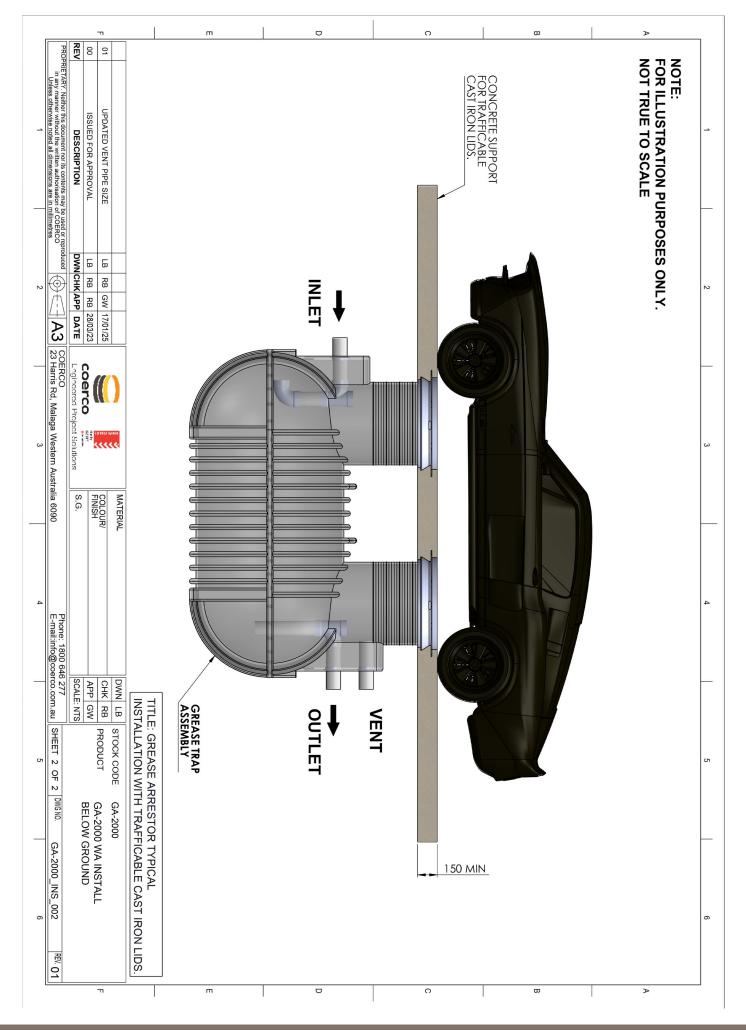




Above ground non-trafficable cover

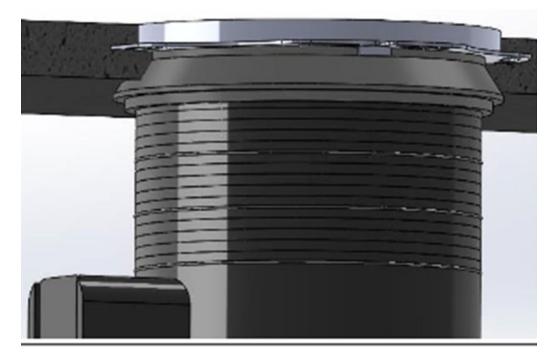


Below ground trafficable cover

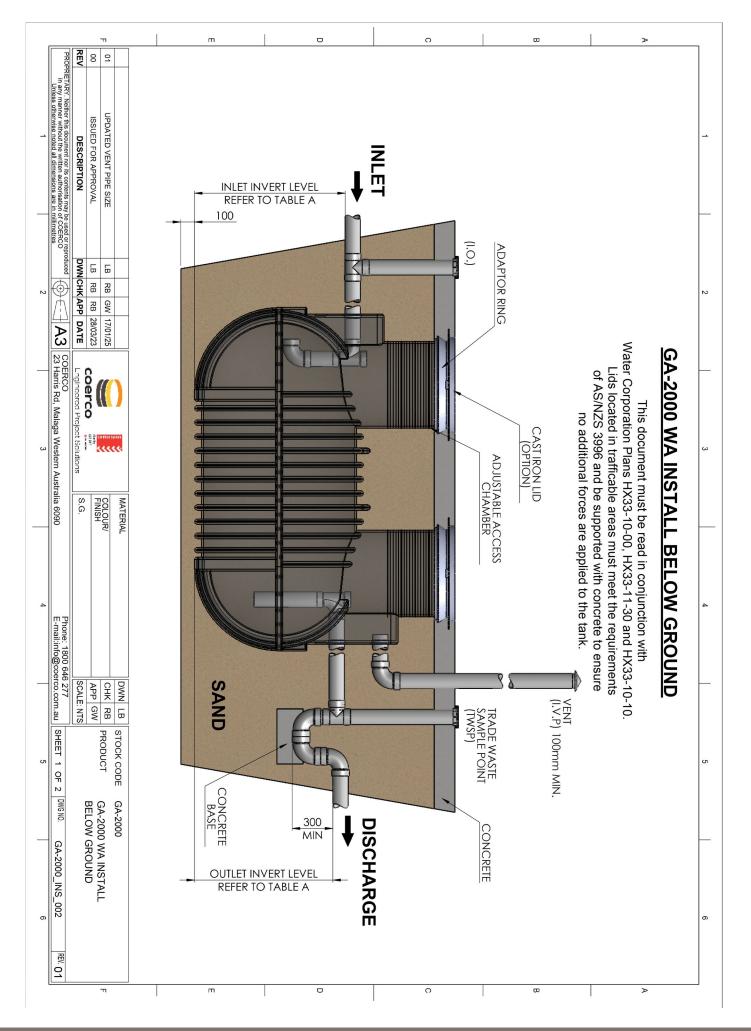



For Western Australian Installations

For Western Australian Installations

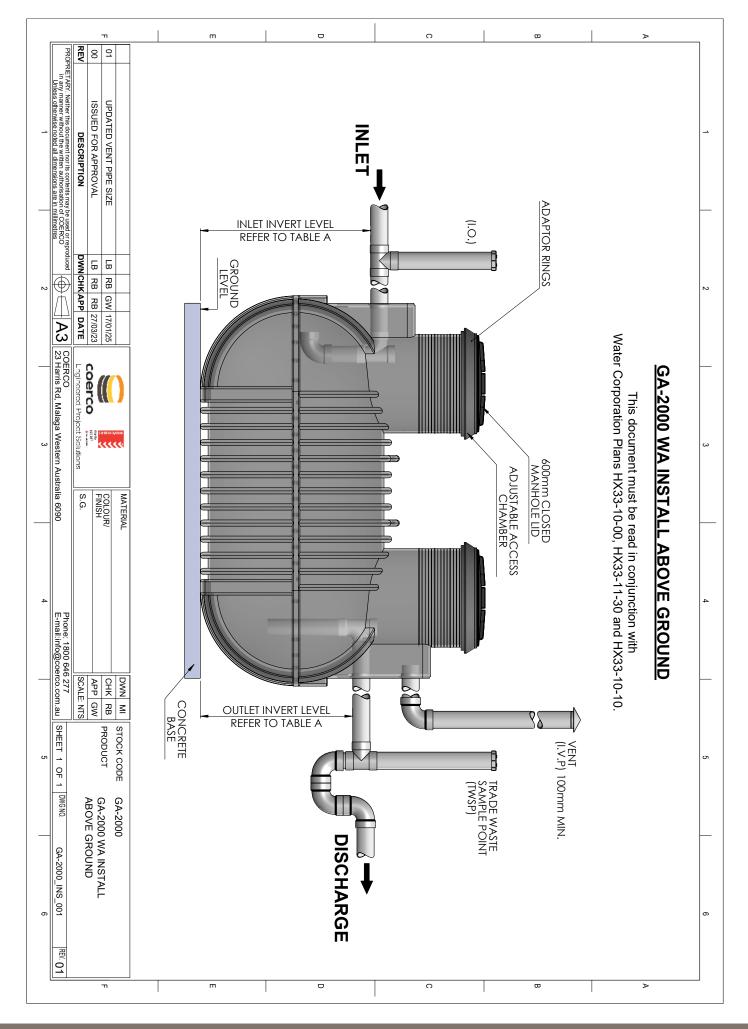



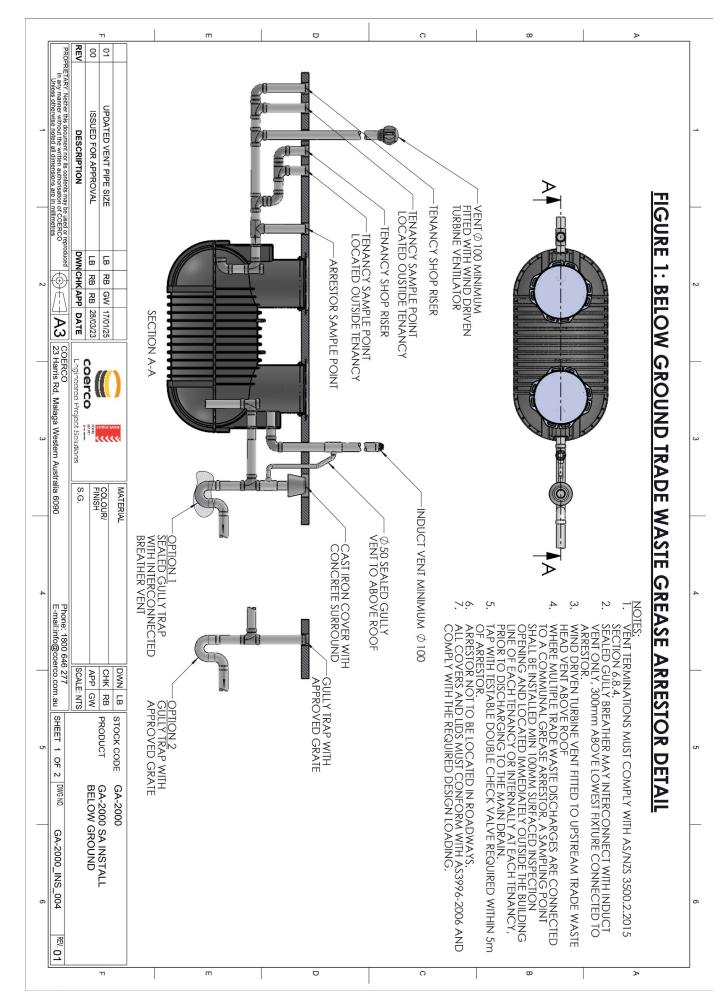

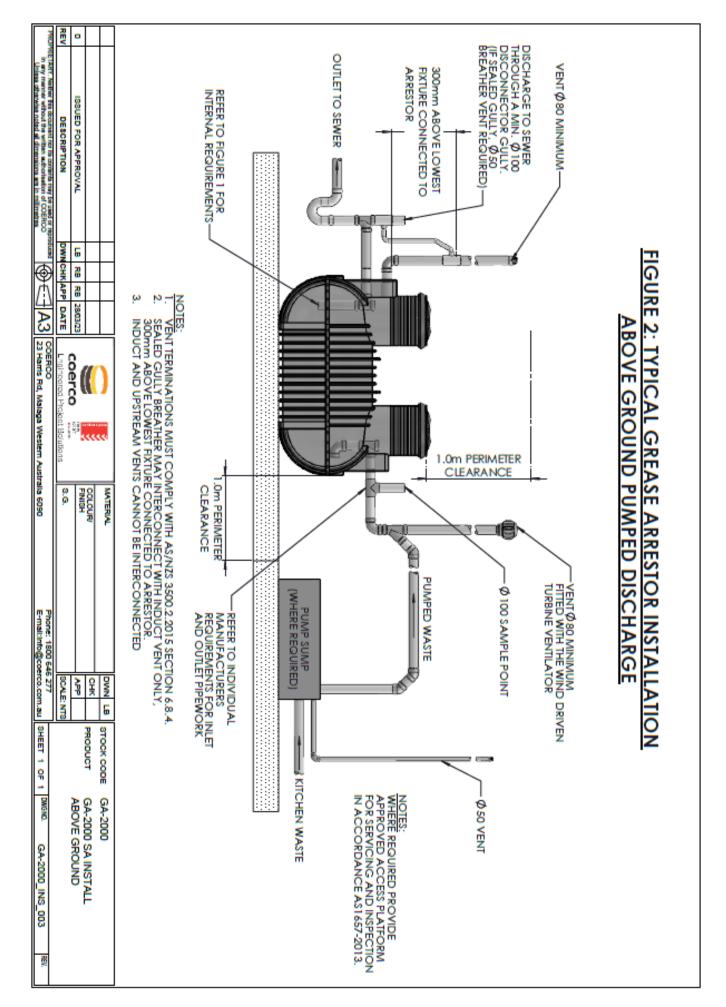

For South Australian Installations

© Coerco

Product Installation, Operation and Maintenance Manual



Table A

Model	Operating Capacity (L)	Install Type 1	Length 2 (mm)	Width 2 (mm)	Height 3 (mm)	Pipe Size (mm)	Inlet Height 4 (mm)	Outlet Height 4 (mm)	Inlet Invert Level* (mm)	Max. Grease Storage Depth (mm)	Max. Solids Storage Depth (mm)
GA-1200	1260lt	Both	2500	1000	1670	100	910	810	760	120	230
GA-2000	1860lt	Both	2500	1225	1845	100	1110	1010	735	150	280
GA-4000	4200lt	Both	2500	1800	2520	100	1670	1570	850	240	415

1: Above or Below Ground 2: External 3: Including Manhole Riser 4: From tank base

* Using trafficable lids will add min 58mm for class B lids and 135mm for class D lids to the invert level. Deeper inverts can be achieved with the use of extension risers, please contact your Coerco sales representative for further details.

Table 3.1 Load Classifications of Covers and Grates

Class	Typical Use	Normal wheel loading kg	Serviceability design load kN	Ultimate limit state design load kN
A	Areas (including footways) accessible only to pedestrians and pedal cyclists and closed to other traffic (extra-light duty)	330	6.7	10
В	Areas (including footways and light tractor paths) accessible to vehicles (excluding commercial vehicles) or livestock (light duty)	2 670	53	80
С	Malls and areas open to slow moving commercial vehicles (medium duty)	5 000 100		150
D	Carriageways of roads and areas open to commercial vehicles (heavy duty)	8 000	140	210
E	General docks and aircraft pavements (extra heavy duty - E)	13 700	267	400
F	Docks and aircraft pavements subject to high wheel loads (extra heavy duty - F)	20 000	400	600
G	Docks and aircraft pavements subject to very high wheels loads (extra heavy duty - G)	30 000	600	900

NOTES

- 1 Nominal wheel loads are given for guidance only. Consideration should be given to the type, size and pneumatic pressure of the load applied.
- 2 Class B design loads exceed AS 5100.2 requirements for footway loading
- 3 Class D design loads exceed AS 5100.2 requirements for a W80 wheel load.
- 4 Class C units are based on an intermediate load.
- 5 The serviceability load is set at 2/3 of the ultimate limit state design load.
- 6 A force of 1kN approximately equal to the weight of 100 kg.

Product Installation, Operation and Maintenance Manual



Placement of Tank

- Utilising the molded lifting points, place the tank on the completed 100mm clean and level compacted sand pad
- Ensure tank is true and level with adequate drain fall.
- Your installation should be installed as approved by the relevant authority to meet all applicable standards and guidelines.
- Connect Plumbing pipework to AS/NZS 3500.1 and AS/NZS 3500.2 regulations.
- All Grease Arrestors require venting to atmosphere in accordance with AS/NZS 3500.2 and must be read in conjunction with
- Western Australia Water Corp. <u>https://www.watercorporation.com.au/Help-and-advice/</u> <u>Trade-waste/Retail-food-businesses/Grease-arrestor-maintenance/Grease-arrestor-installation-</u> <u>guidelines</u> and Plan HX33-10-00 and PLB Technical Note "Venting in Trade Waste Applications"
- All Grease Arrestors require installation of a Trade Waste Sample Point (TWSP) immediately downstream of the outlet, as per guidelines contained in Water Corp Plan HX33-11-30 and HX33-10-10 for sealed TWSP's.
- **South Australia** S.A. Water Basic pre-treatment devices Design, Installation and Accessibility notes 18/12/18.
- Adjust risers to suit application, as detailed above.
- Secure Manhole Adaptor with Stainless Steel fasteners and cover all tank openings to prevent dirt ingress during backfilling.
- In areas of potential high water tables, concrete ground anchors should be provided at the base of the hole tied in with 20mm rebar installed to the four legs via the anchor points provided. Contact Coerco Engineering Department for further details and calculations.
- Fill tank with water prior to backfilling.




- Backfill and foundation material should consist of clean permeable sand, cracker dust or crushed limestone. Clay is not permitted.
- Place fill slowly and evenly from all sides, to ensure there are no voids.
- Backfill around the tank shall be placed evenly in compacted layers, no greater than 300mm.
- Only handheld vibrating plate compactors (Jumping Jack/Rammer) may be used in the compaction process.
- Soil pressures based on a backfill/subgrade material must have a minimum density of 18kN/m3 and a maximum of 20kn/m3.
- Backfill material is to be compacted around the perimeter of the tank to a 98% modified dry density + 2% for optimum moisture content.
- Divert stormwater/runoff from the tank location through use of bunds or diversion drains.


Product Installation, Operation and Maintenance Manual





Completion and Maintenance Instructions


- Your installation must be inspected by the relevant authority, which should be arranged at a suitable time prior to usage.
- A Certificate of Compliance must be provided to the PLB on commencement/completion of the installation.
- A Trade Waste application should be submitted to the local Water Authority prior to any discharge from the apparatus.
- The local Water Authority must be notified within fourteen (14) days upon installation of the Grease Arrestor.
- A maintenance schedule agreement will be determined by the local Water Authority based on wastewater loads, with a suitably licensed contractor utilized for cleaning/maintenance to the schedule.
- Clear access must be maintained at all times.
- A water tap with an appropriate backflow prevention device must be located within 5m of the arrestor pit for maintenance purposes.
- No use of emulsifying agents upstream of apparatus is permitted.

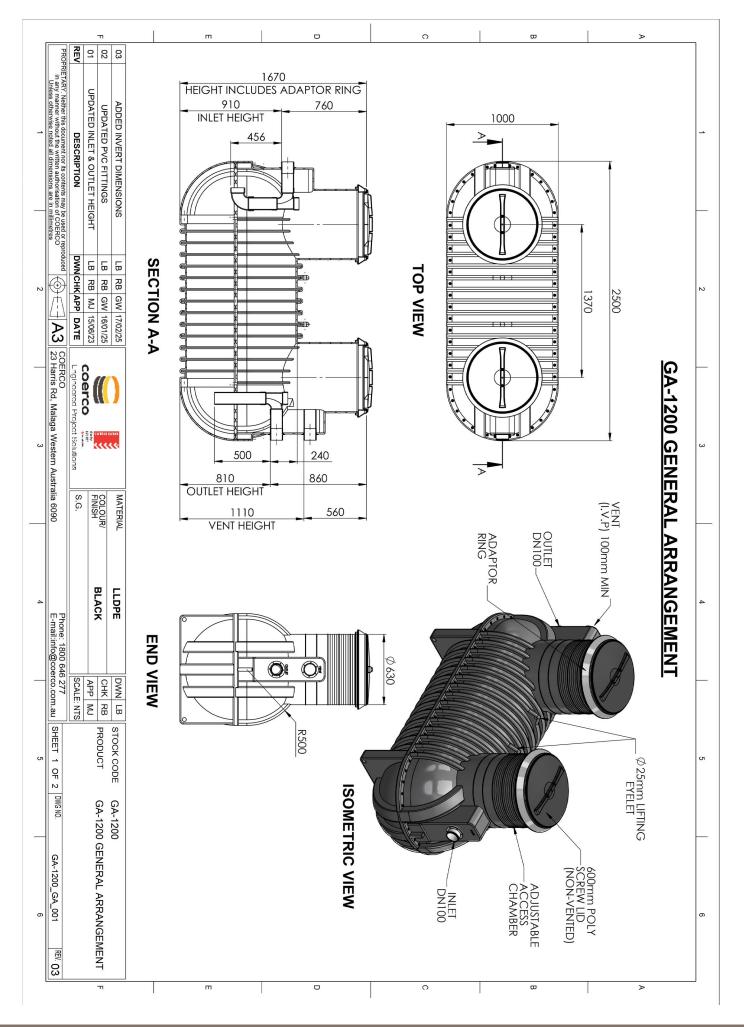

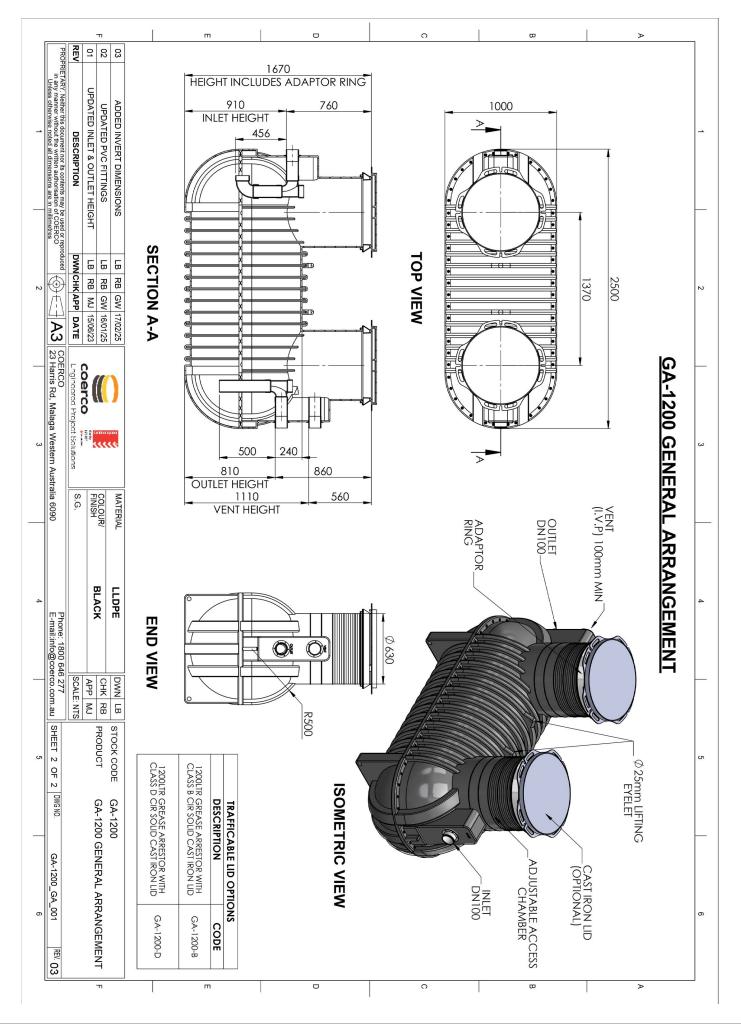

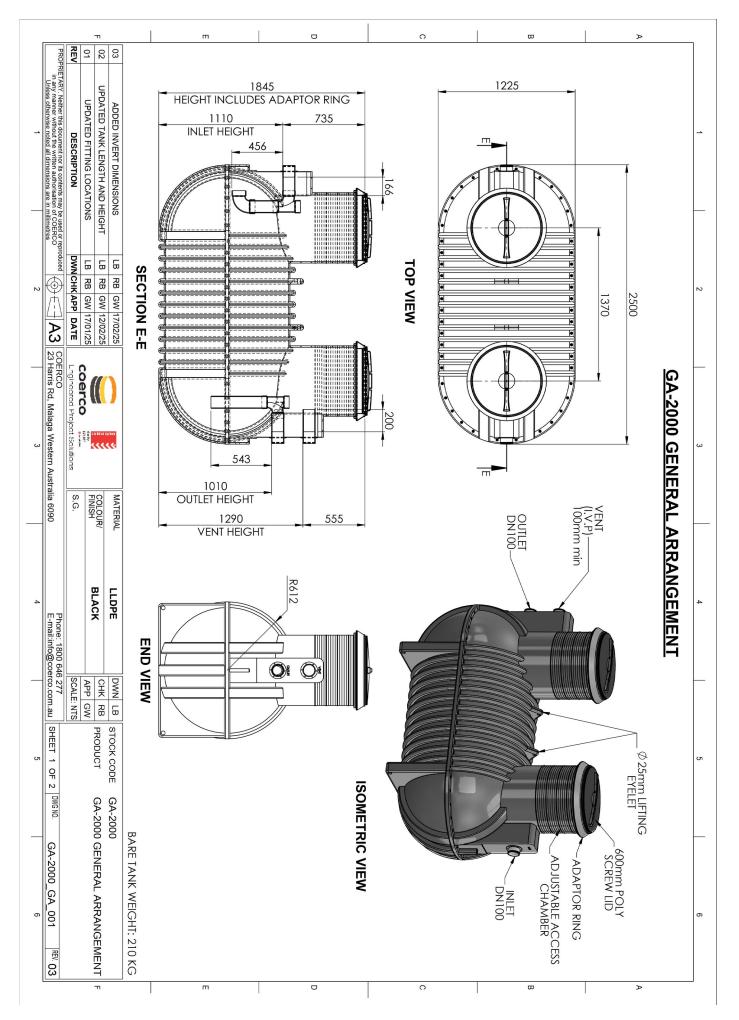


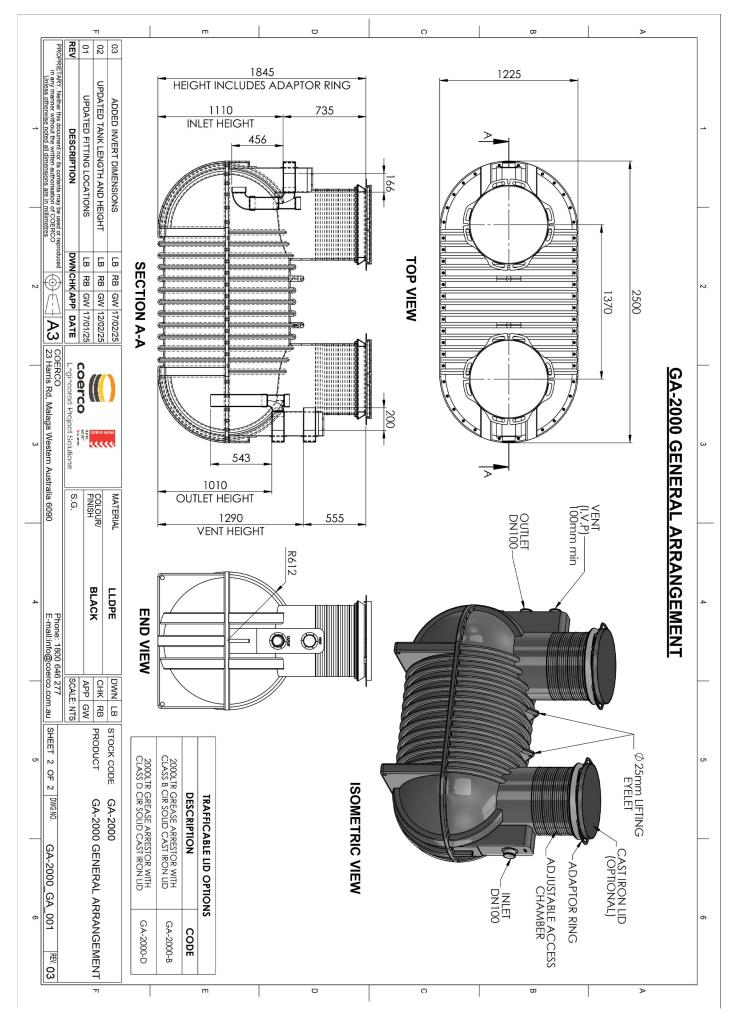

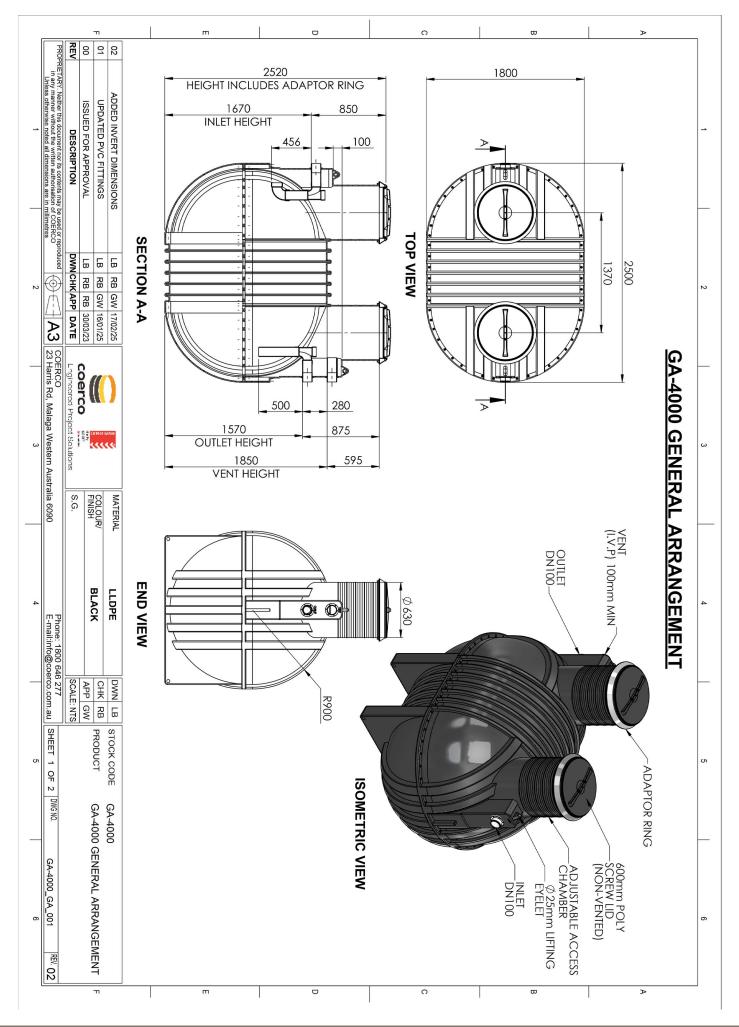

© Coerco

19

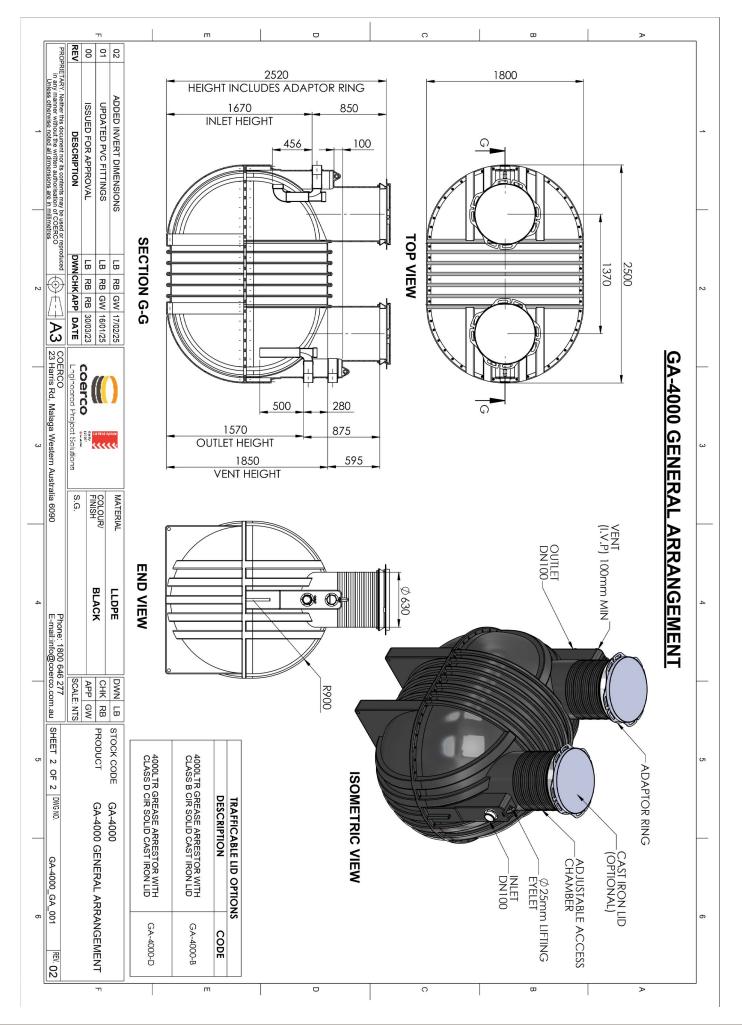

Rev 6, 17 Feb 202

Product Installation, Operation and Maintenance Manual



Australian Consumer Law and Consumer Warranty

- Coerco warrants all our Grease Arrestors against defects in materials and workmanship for a period of 5 years from the date of purchase.
- Coerco handles returns and process refunds in accordance with the Australian Consumer Law.
- Should you wish to return your order, you must contact us within fourteen (14) calendar days of delivery to report any discrepancies or faults.
- You are entitled to return a faulty Product. You may choose a refund or exchange if a Product has a major fault. If the fault is minor, Coerco may elect to give you a free repair instead of a replacement or refund.
- Returns or refunds are made in our discretion subject to any guarantees that cannot be excluded under the Australian Consumer Law.

Owner Details							
Name							
Installation							
Address				Postcode			
Phone		Email					
Serial Numbers							
Date of Purchase							

Installer Details							
Name/Company							
Address							
				Postcode			
Phone		Email					

Contact Us

We are always happy to receive feedback about our products and services so call one of our friendly staff if you require any further information about any of our products and services.

Mail:

Coerco P.O. Box 319 Dalwallinu W.A. 6609. Freecall: 1800 646 277

Email: info@coerco.com.au

